

ENP NSK

Bearing interchange tables

TYPE: Bearing cross reference, interchange tables, Bearings and bearing units FKL



Technical specification

MANUFACTURER	NSK	INTERCHANGE
INTERCHANGE		
FKL	UYS...	LKC...
SKF	SYJ.FM	UED...
FAG	SG162	LED...
INA	PASE	UYD...
NTN	-	LYD...
KOYO	SAP	USD...
FKL	USS...	LKD...
FKL	USV...	LEP...
FKL	UEU...	LYP...
FKL	LEU...	USP...
FKL	UYU...	LKP...
FKL	LYU...	LER...
FKL	USU...	LYR...
FKL	LKU...	USR...
FKL	USF...	LKR...
FKL	USN...	SKF -
FKL	USG...	FAG SG762.B
FKL	UST...	INA -
FKL	LEC...	NSK -
FKL	LYC...	KOYO -
FKL	USC...	FAG -
		SKF SYF.RM
		INA PSHEY
		SKF SYF TF

INTERCHANGE

INA	RSHEY
SKF	SYF.FM
INA	PSHE
SKF	SYF.WF
INA	RSHE
SKF	SYF.KF
KOYO	--
FAG	FG762.B
SKF	PF.TF
FAG	FB562
INA	RRY
SKF	PF.WF
FAG	FB362.B
INA	RR
FAG	FB762.B
SKF	PFD.RM
INA	PATRY
SKF	PFD.TF
INA	RRTRY
SKF	PFD.FM
INA	RATR
SKF	PFD.WF
INA	RRTR
SKF	PFT.TF
INA	RRTY
NSK	ENPFL
SKF	PFT.WF
INA	RRT
SKF	P.TF
SKF	P.WF
FAG	SB762.B
FKL	UES...
FKL	LKS...
FKL	UEV...
FKL	LEV...
FKL	UYV...
FKL	LYV...
FKL	LKV...
FKL	UYF...
FKL	LKF...
FKL	UEN...
FKL	LEN...
FKL	UYN...
FKL	LYN...
FKL	LKN...
FKL	UEG...
FKL	LEG...
FKL	UYG...

INTERCHANGE

FKL	LYG...
FKL	LKG...
FKL	UET...
FKL	LET...
FKL	UYT...
FKL	LYT...
FKL	LKT...
FKL	UEC...
FKL	UEP...
FKL	UYP...
FKL	UER...
SKF	SYJ.RM
INA	PASEY
NSK	UBP
NTN	ASP
KOYO	SBP
SKF	SYJ.KF
NSK	UKP
NTN	UKP
KOYO	UKP
SKF	SYFJ.RM
NSK	UBPA
NTN	ASUP
KOYO	SBPA
SKF	SYFJ.TF
NSK	UCPA
NTN	UCUP
KOYO	UCPA
SKF	SYFJ.FM
NTN	AELUP
KOYO	SAPA
SKF	SYFJ.WF
NSK	EWPA
NTN	UELUP
KOYO	NAPA
SKF	SYFJ.KF
NSK	UKPA
NTN	UKUP
KOYO	UKPA
SKF	FYJ.FM
FAG	FG162
INA	PCJ
NTN	AELF
KOYO	SAF
SKF	FYJ.KF
NSK	UKF
NTN	UKF
KOYO	UKF

INTERCHANGE

SKF	FYTJ.RM
INA	PCJTY
NSK	UBFL
NTN	ASFL
KOYO	SBFL
SKF	FYTJ.TF
INA	RCJTY
NSK	UCLF
NTN	UCFL
KOYO	UCFL
SKF	FYTJ.FM
INA	PCJT
NTN	AELFL
KOYO	SAFL
SKF	FYTJ.WF
INA	RCJT
NSK	EWFL
NTN	UELFL
KOYO	NAFL
SKF	FYTJ.KF
NSK	UKFL
NTN	UKFL
KOYO	UKFL
SKF	FYC.RM
NSK	UBFC
NTN	ASFC
KOYO	SBFC
SKF	FYC.TF
NSK	UCFC
NTN	UCFC
KOYO	UCFC
SKF	FYC.FM
NTN	AELFC
SKF	FYC.WF
INA	RFE
NSK	EWFC
NTN	UELFC
KOYO	NAFC
SKF	FYC.KF
NSK	UKFC
NTN	UKFC
KOYO	UKFC
SKF	TU.RM
NSK	UBT
NTN	AST
KOYO	SBT
SKF	TU.TF
NSK	UCT

INTERCHANGE

NTN	UCT
KOYO	UCT
SKF	TU.FM
INA	PTUE
NSK	ENT
NTN	AELT
KOYO	SAT
SKF	TU.WF
INA	RTUE
NSK	EWT
NTN	UFLT
KOYO	NAT
SKF	TU.KF
NSK	UKT
NTN	UKT
KOYO	UKT
SKF	PF.RM
INA	RAY
NSK	UBPF
NTN	ASPF
KOYO	SBPF
SKF	PFT.RM
INA	RATY
NSK	UBPFL
NTN	ASPFL
KOYO	SBPFL
SKF	PFT.FM
INA	RAT
NTN	AELPFL
KOYO	SAPFL
SKF	P.RM
INA	PBY
NSK	UBPP
NTN	ASPP
KOYO	SBPP