

## - INA

Bearing interchange tables

TYPE: Bearing cross reference, interchange tables, Bearings and bearing units FKL



## **Technical specification**

MANUFACTURER	<u>INA</u>	INTERCHANGE	
		FKL	UST
INTERCHANGE	1166	FKL	<u>LKT</u>
FKL	<u>USS</u>	FKL	<u>USC</u>
FKL	<u>LKS</u>	FKL	LKC
FKL	UEV	FKL	<u>USD</u>
FKL	LEV	FKL	LKD
FKL	<u>UYV</u>	FKL	<u>USP</u>
FKL	LYV	FKL	<u>LKP</u>
FKL	<u>USV</u>	FKL	<u>LER</u>
FKL	LKV	FKL	LYR
FKL FKL	USU	FKL	<u>USR</u>
	LKU	FKL	<u>LKR</u>
FKL	USF	NTN	_
FKL	LKF	SKF	_
FKL FKL	USN	FAG	<u>SG762.B</u>
FKL	LKN	NSK	<u>-</u>
FKL	UEG	KOYO	<u>-</u>
FKL	LEG	FAG	
FKL	UYG	SKF	SYJ.KF
FKL	USG	NSK	<u>UKP</u>
FKL	LKG	NTN	<u>UKP</u>
	UET	KOYO	<u>UKP</u>
FKL	<u>LET</u>	SKF	SYFJ.RM
		NSK	UBPA





## **Bearings**

INTERCHANGE		INTERCHANGE	
NTN	ASUP	NTN	UCT
KOYO	SBPA	KOYO	UCT
SKF	SYFJ.TF	SKF	TU.KF
NSK	UCPA	NSK	UKT
NTN	UCUP	NTN	UKT
KOYO	UCPA	KOYO	UKT
SKF	SYFJ.FM	FAG	FB762.B
NTN	AELUP	SKF	P TF
KOYO	SAPA	SKF	P.WF
SKF	SYFJ.WF	FAG	SB762.B
NSK	EWPA	FKL	UES
NTN	UELUP	FKL	UYS
KOYO	NAPA	FKL	UEU
SKF	SYFJ.KF	FKL	LEU
NSK	UKPA	FKL	UYU
NTN	UKUP	FKL	LYU
KOYO	UKPA	FKL	UYF
SKF	SYF.KF	FKL	UEN
KOYO		FKL	LEN
FAG	FG762.B	FKL	UYN
SKF	FYJ.KF	FKL	LYN
NSK	UKF	FKL	LYG
NTN	UKF	FKL	UYT
KOYO	UKF	FKL	LYT
SKF	FYTJ.KF	FKL	UEC
NSK	UKFL	FKL	LEC
NTN	UKFL	FKL	LYC
KOYO	UKFL	FKL	UED
SKF	FYC.RM	FKL	LED
NSK	UBFC	FKL	UYD
NTN	ASFC	FKL	LYD
KOYO	SBFC	FKL	UEP
SKF	FYC.TF	FKL	LEP
NSK	UCFC	FKL	UYP
NTN	<u>UCFC</u>	FKL	LYP
коуо	UCFC	FKL	UER
SKF	FYC.FM	SKF	SYJ.RM_
NTN	AELFC	INA	PASEY
SKF	FYC.KF	NSK	<u>UBP</u>
NSK	UKFC	NTN	ASP
NTN	UKFC	KOYO	SBP
коуо	UKFC	SKF	SYJ.FM
SKF	TU.RM_	FAG	SG162
NSK	<u>UBT</u>	INA	PASE
NTN	AST	NSK	ENP
КОҮО	<u>SBT</u>	KOYO	SAP
SKF	<u>TU.TF</u>	SKF	SYF.RM
NSK	<u>UCT</u>	INA	<u>PSHEY</u>





## **Bearings**

INTERCHANGE		INTERCHANGE	
SKF	SYF TF	NTN	ASPF
INA	RSHEY	KOYO	SBPF
SKF	SYF.FM	SKF	PF TF
INA	PSHE	FAG	FB562
SKF	SYF.WF	INA	RRY
INA	RSHE	SKF	PF.WF
SKF	FYJ.FM_	FAG	FB362.B
FAG	FG162	INA	RR
INA	PCJ	SKF	PFD.RM
NTN	<u>AELF</u>	INA	PATRY
KOYO	SAF	SKF	PFD.TF
SKF	FYTJ.RM	INA	RRTRY
INA	<u>PCJTY</u>	SKF	PFD.FM
NSK	UBFL	INA	RATR
NTN	<u>ASFL</u>	SKF	PFD.WF
KOYO	SBFL	INA	RRTR
SKF	FYTJ.TF	SKF	PFT.RM
INA	RCJTY	INA	RATY
NSK	UCLF	NSK	<u>UBPFL</u>
NTN	UCFL	NTN	<u>ASPFL</u>
KOYO	<u>UCFL</u>	KOYO	SBPFL
SKF	FYTJ.FM	SKF	PFT TF
INA	<u>PCJT</u>	INA	RRTY
NTN	<u>AELFL</u>	NSK	<u>ENPFL</u>
KOYO	SAFL	SKF	PFT.FM
SKF	FYTJ.WF	INA	RAT
INA	<u>RCJT</u>	NTN	<u>AELPFL</u>
NSK	<u>EWFL</u>	KOYO	SAPFL
NTN	<u>UELFL</u>	SKF	PFT.WF
KOYO	NAFL	INA	RRT
SKF	FYC.WF	SKF	P.RM
INA	RFE	INA	<u>PBY</u>
NSK	<u>EWFC</u>	NSK	<u>UBPP</u>
NTN	<u>UELFC</u>	NTN	<u>ASPP</u>
KOYO	NAFC	KOYO	<u>SBPP</u>
SKF	<u>TU.FM</u>		
INA	PTUE		
NSK	<u>ENT</u>		
NTN	<u>AELT</u>		
KOYO	SAT		
SKF	TU.WF		
INA	RTUE		
NSK	<u>EWT</u>		
NTN	<u>UELT</u>		
KOYO	NAT		
SKF	PF.RM_		
INA	RAY		
NSK	<u>UBPF</u>		

