LKF... UEN... LEN... UYN... LYN... USN... LKN... UEG... LEG... UYG... LYG... USG... LKG... UET... LET... UYT... LYT... UST... LKT... UEC... USC... LKC... UED...

LED...



UBPA NSK

Bearing interchange tables

TYPE: Bearing cross reference, interchange tables, Bearings and bearing units FKL



Technical specification

MANUFACTURER	NSK	INTERCHANGE
		FKL
INTERCHANGE		FKL
FKL	UEV	FKL
FAG	<u>-</u>	FKL
INA	<u>-</u>	FKL
SKF	SYFJ.RM_	FKL
NTN	<u>ASUP</u>	FKL
KOYO	<u>SBPA</u>	FKL
FKL	<u>UES</u>	FKL
FKL	<u>USS</u>	FKL
FKL	LKS	FKL
FKL	LEV	FKL
FKL	<u>UYV</u>	FKL
FKL	<u>LYV</u>	FKL
FKL	<u>USV</u>	FKL
FKL	<u>LKV</u>	FKL
FKL	<u>UEU</u>	FKL
FKL	<u>LEU</u>	FKL
FKL	<u>UYU</u>	FKL
FKL	LYU	FKL
FKL	<u>USU</u>	FKL
FKL	LKU	FKL
FKL	<u>USF</u>	FKL
		FKL
		INL





Bearings

INTERCHANGE		INTERCHANGE	
FKL	UYD	SKF	SYF.FM
FKL	LYD	INA	PSHE
FKL	USD	SKF	SYF.WF
FKL	LKD	INA	RSHE
FKL	UEP	SKF	SYF.KF
FKL	LEP	KOYO	<u></u>
FKL	UYP	FAG	FG762.B
FKL	LYP	SKF	FYJ.KF
FKL	<u>USP</u>	NSK	<u>UKF</u>
FKL	LKP	NTN	<u>UKF</u>
FKL	<u>UER</u>	KOYO	<u>UKF</u>
FKL	<u>LER</u>	SKF	<u>FYTJ.RM</u>
FKL	LYR	INA	<u>PCJTY</u>
FKL	<u>USR</u>	NSK	<u>UBFL</u>
FKL	<u>LKR</u>	NTN	<u>ASFL</u>
SKF	SYJ.RM_	KOYO	SBFL
INA	PASEY	SKF	<u>FYTJ.TF</u>
NSK	<u>UBP</u>	INA	<u>RCJTY</u>
NTN	<u>ASP</u>	NSK	<u>UCLF</u>
KOYO	<u>SBP</u>	NTN	<u>UCFL</u>
NTN	<u>-</u>	KOYO	<u>UCFL</u>
SKF	_	SKF	<u>FYTJ.FM</u>
FAG	<u>SG762.B</u>	INA	<u>PCJT</u>
NSK	_	NTN	<u>AELFL</u>
KOYO	<u>-</u>	KOYO	<u>SAFL</u>
SKF	<u>SYJ.KF</u>	SKF	<u>FYTJ.WF</u>
NSK	<u>UKP</u>	INA	<u>RCJT</u>
NTN	<u>UKP</u>	NSK	<u>EWFL</u>
KOYO	<u>UKP</u>	NTN	<u>UELFL</u>
SKF	SYFJ.TF	KOYO	<u>NAFL</u>
NSK	<u>UCPA</u>	SKF	<u>FYTJ.KF</u>
NTN	<u>UCUP</u>	NSK	<u>UKFL</u>
KOYO	<u>UCPA</u>	NTN	<u>UKFL</u>
SKF	SYFJ.FM_	KOYO	<u>UKFL</u>
NTN	<u>AELUP</u>	SKF	FYC.RM
KOYO	SAPA	NSK	<u>UBFC</u>
SKF	SYFJ.WF	NTN	<u>ASFC</u>
NSK	EWPA	коуо	SBFC
NTN	<u>UELUP</u>	SKF	<u>FYC.TF</u>
КОҮО	NAPA	NSK	<u>UCFC</u>
SKF	SYFJ.KF	NTN	<u>UCFC</u>
NSK	UKPA	KOYO	<u>UCFC</u>
NTN	UKUP	SKF	FYC.FM
KOYO	UKPA	NTN	AELFC
SKF	SYF.RM	SKF	FYC.WF
INA	PSHEY	INA	RFE
SKF	SYF TF	NSK	<u>EWFC</u>
INA	RSHEY	NTN	<u>UELFC</u>





Bearings

INTERCHANGE		INTERCHANGE	
KOYO	<u>NAFC</u>	NSK	<u>ENPFL</u>
SKF	FYC.KF	SKF	PFT.FM
NSK	<u>UKFC</u>	INA	RAT
NTN	UKFC	NTN	AELPFL
KOYO	<u>UKFC</u>	KOYO	SAPFL
SKF	TU.RM_	SKF	PFT.WF
NSK	<u>UBT</u>	INA	RRT
NTN	AST	SKF	P.RM
KOYO	SBT	INA	<u>PBY</u>
SKF	<u>TU.TF</u>	NSK	<u>UBPP</u>
NSK	<u>UCT</u>	NTN	<u>ASPP</u>
NTN	<u>UCT</u>	KOYO	SBPP
KOYO	<u>UCT</u>	SKF	<u>P TF</u>
SKF	TU.FM_	SKF	P.WF
INA	PTUE	FAG	<u>SB762.B</u>
NSK	<u>ENT</u>	FKL	UYS
NTN	AELT	FKL	<u>UYF</u>
KOYO	SAT	FKL	LEC
SKF	<u>TU.WF</u>	FKL	LYC
INA	RTUE	SKF	SYJ.FM_
NSK	<u>EWT</u>	FAG	SG162
NTN	<u>UELT</u>	INA	PASE
KOYO	NAT	NSK	<u>ENP</u>
SKF	<u>TU.KF</u>	KOYO	SAP
NSK	<u>UKT</u>	SKF	<u>FYJ.FM</u>
NTN	<u>UKT</u>	FAG	FG162
KOYO	<u>UKT</u>	INA	<u>PCJ</u>
SKF	PF.RM	NTN	AELF
INA	RAY	KOYO	SAF
NSK	UBPF	SKF	PF TF
NTN	<u>ASPF</u>	FAG	FB562
KOYO	SBPF 507.63 P	INA	RRY
FAG	FB762.B	SKF	PF.WF
SKF	PFD.RM	FAG	FB362.B
INA	<u>PATRY</u>	INA	RR
SKF	PFD.TF		
INA	RRTRY		
SKF	PFD.FM		
INA SKF	RATR DED WE		
	PFD.WF		
INA SKF	RRTR DET DM		
INA	PFT.RM RATY		
NSK	UBPFL		
NTN	ASPFL		
KOYO	SBPFL_		
SKF	PFT TF		
INA	RRTY		
IIVA	KKII		

