

## SYF.KF SKF

Bearing interchange tables

TYPE: Bearing cross reference, interchange tables, Bearings and bearing units FKL



## **Technical specification**

MANUFACTURER	SKF	INTERCHANGE	
INTERCUANCE		FKL	UYF
INTERCHANGE	1.121.1	FKL	<u>USF</u>
FKL	LKU	FKL	<u>LKF</u>
FAG	<u>-</u>	FKL	UEN
NTN	<u>-</u>	FKL	<u>LEN</u>
INA	<u> </u>	FKL	UYN
NSK		FKL	LYN
KOYO		FKL	<u>USN</u>
FKL	UES	FKL	LKN
FKL	UYS	FKL	UEG
FKL	USS	FKL	LEG
FKL	LKS	FKL	UYG
FKL	UEV	FKL	LYG
FKL	LEV	FKL	<u>USG</u>
FKL	UYV	FKL	LKG
FKL	LYV	FKL	<u>UET</u>
FKL	USV	FKL	<u>LET</u>
FKL	<u>LKV</u>	FKL	UYT
FKL	UEU	FKL	LYT
FKL	LEU	FKL	UST
FKL	<u>UYU</u>	FKL	LKT
FKL	LYU	FKL	UEC
FKL	<u>USU</u>	FKL	LEC
		FKL	LYC





## **Bearings**

INTERCHANGE		INTERCHANGE	
FKL	USC	NSK	EWPA
FKL	LKC	NTN	UELUP
FKL	UED	KOYO	NAPA
FKL	LED	SKF	SYFJ.KF
FKL	UYD	NSK	UKPA
FKL	LYD	NTN	UKUP
FKL	USD	KOYO	<u>UKPA</u>
FKL	LKD	SKF	SYF.RM
FKL	UEP	INA	<u>PSHEY</u>
FKL	LEP	SKF	SYF TF
FKL	UYP	INA	RSHEY
FKL	LYP	SKF	SYF.FM
FKL	<u>USP</u>	INA	<u>PSHE</u>
FKL	LKP	SKF	SYF.WF
FKL	UER	INA	<u>RSHE</u>
FKL	LER	SKF	FYJ.FM
FKL	LYR	FAG	FG162
FKL	USR	INA	PCJ
FKL	LKR	NTN	<u>AELF</u>
SKF	SYJ.RM	KOYO	SAF
INA	PASEY	FAG	FG762.B
NSK	<u>UBP</u>	SKF	FYJ.KF
NTN	<u>ASP</u>	NSK	<u>UKF</u>
KOYO	SBP	NTN	<u>UKF</u>
SKF	SYJ.FM	KOYO	<u>UKF</u>
FAG	SG162	SKF	FYTJ.RM
INA	<u>PASE</u>	INA	<u>PCJTY</u>
NSK	<u>ENP</u>	NSK	<u>UBFL</u>
KOYO	SAP	NTN	<u>ASFL</u>
SKF	<u>-</u>	KOYO	<u>SBFL</u>
FAG	SG762.B	SKF	<u>FYTJ.TF</u>
KOYO	<u>-</u>	INA	RCJTY
SKF	SYJ.KF	NSK	<u>UCLF</u>
NSK	<u>UKP</u>	NTN	<u>UCFL</u>
NTN	<u>UKP</u>	KOYO	<u>UCFL</u>
KOYO	<u>UKP</u>	SKF	FYTJ.FM_
SKF	SYFJ.RM_	INA	<u>PCJT</u>
NSK	<u>UBPA</u>	NTN	<u>AELFL</u>
NTN	<u>ASUP</u>	KOYO	SAFL
KOYO	<u>SBPA</u>	SKF	<u>FYTJ.WF</u>
SKF	SYFJ.TF	INA	<u>RCJT</u>
NSK	<u>UCPA</u>	NSK	<u>EWFL</u>
NTN	<u>UCUP</u>	NTN	<u>UELFL</u>
KOYO	<u>UCPA</u>	KOYO	<u>NAFL</u>
SKF	SYFJ.FM	SKF	<u>FYTJ.KF</u>
NTN	AELUP	NSK	<u>UKFL</u>
KOYO	SAPA	NTN	<u>UKFL</u>
SKF	SYFJ.WF	KOYO	<u>UKFL</u>





## **Bearings**

INTERCHANGE		INTERCHANGE	
SKF	FYC.RM	INA	RRY
NSK	<u>UBFC</u>	SKF	PF.WF
NTN	<u>ASFC</u>	FAG	FB362.B
KOYO	SBFC	INA	RR
SKF	FYC.TF	FAG	FB762.B
NSK	UCFC	SKF	PFD.RM
NTN	<u>UCFC</u>	INA	PATRY
KOYO	<u>UCFC</u>	SKF	PFD.TF
SKF	FYC.FM	INA	RRTRY
NTN	<u>AELFC</u>	SKF	PFD.FM
SKF	FYC.WF	INA	RATR
INA	RFE	SKF	PFD.WF
NSK	<u>EWFC</u>	INA	<u>RRTR</u>
NTN	<u>UELFC</u>	SKF	PFT.RM
KOYO	<u>NAFC</u>	INA	RATY
SKF	FYC.KF	NSK	<u>UBPFL</u>
NSK	<u>UKFC</u>	NTN	ASPFL
NTN	<u>UKFC</u>	KOYO	SBPFL
KOYO	<u>UKFC</u>	SKF	PFT TF
SKF	TU.RM	INA	RRTY
NSK	<u>UBT</u>	NSK	ENPFL
NTN	<u>AST</u>	SKF	PFT.FM
KOYO	<u>SBT</u>	INA	RAT
SKF	TU.TF	NTN	<u>AELPFL</u>
NSK	<u>UCT</u>	KOYO	SAPFL
NTN	<u>UCT</u>	SKF	PFT.WF
KOYO	<u>UCT</u>	INA	<u>RRT</u>
SKF	TU.FM_	SKF	P.RM_
INA	PTUE	INA	PBY
NSK	ENT	NSK	<u>UBPP</u>
NTN	<u>AELT</u>	NTN	<u>ASPP</u>
KOYO	SAT	KOYO	SBPP
SKF	TU.WF	SKF	P TF
INA	RTUE	SKF	P.WF
NSK	<u>EWT</u>	FAG	<u>SB762.B</u>
NTN	<u>UELT</u>		
KOYO	NAT		
SKF	TU.KF		
NSK	<u>UKT</u>		
NTN	<u>UKT</u>		
KOYO	<u>UKT</u>		
SKF	PF.RM		
INA	RAY		
NSK	<u>UBPF</u>		
NTN	<u>ASPF</u>		
KOYO	SBPF		
SKF	PF TF		
FAG	FB562		

