

USF... FKL

Bearing interchange tables

TYPE: Bearing cross reference, interchange tables, Bearings and bearing units FKL



Technical specification

MANUFACTURER	<u>FKL</u>
INTERCHANGE	
NTN	_
SKF	<u>-</u>
INA	<u> </u>
NSK	<u>-</u>
KOYO	<u>-</u>
FAG	FG762.B
FKL	<u>UYS</u>
FKL	<u>USS</u>
FKL	LKS
FKL	UEV
FKL	LEV
FKL	<u>UYV</u>
FKL	LYV
FKL	USV
FKL	LKV
FKL	<u>UEU</u>
FKL	<u>LEU</u>
FKL	<u>UYU</u>
FKL	LYU
FKL	<u>USU</u>
FKL	LKU

INTERCHANGE	
FKL	UYF
FKL	LKF
FKL	UYN
FKL	USN
FKL	LKN
FKL	UEG
FKL	LEG
FKL	UYG
FKL	USG
FKL	LKG
FKL	UET
FKL	LET
FKL	UST
FKL	LKT
FKL	LEC
FKL	LYC
FKL	USC
FKL	LKC
FKL	UED
FKL	LED
FKL	UYD
FKL	LYD
FKL	USD
FKL	LKD





Bearings

INTERCHANGE		INTERCHANGE	
FKL	LEP	KOYO	
FKL	UYP	SKF	FYJ.FM
FKL	LYP	FAG	FG162
FKL	USP	INA	PCJ
FKL	LKP	NTN	AELF
FKL	LER	KOYO	SAF
FKL	LYR	SKF	FYJ.KF
FKL	USR	NSK	UKF
FKL	LKR	NTN	UKF
SKF	SYJ.FM_	KOYO	UKF
FAG	SG162	SKF	FYTJ.FM_
INA	PASE	INA	PCJT
NSK	ENP	NTN	<u>AELFL</u>
КОҮО	SAP	KOYO	SAFL
FAG	SG762.B	SKF	FYTJ.KF
FAG	<u>-</u>	NSK	UKFL
SKF	SYJ.KF	NTN	<u>UKFL</u>
NSK	UKP	KOYO	UKFL
NTN	<u>UKP</u>	SKF	FYC.RM
KOYO	UKP	NSK	UBFC
SKF	SYFJ.RM	NTN	ASFC
NSK	<u>UBPA</u>	KOYO	SBFC
NTN	<u>ASUP</u>	SKF	FYC.TF
KOYO	<u>SBPA</u>	NSK	<u>UCFC</u>
SKF	SYFJ.TF	NTN	<u>UCFC</u>
NSK	<u>UCPA</u>	KOYO	<u>UCFC</u>
NTN	<u>UCUP</u>	SKF	FYC.FM_
KOYO	<u>UCPA</u>	NTN	<u>AELFC</u>
SKF	SYFJ.FM_	SKF	FYC.KF
NTN	<u>AELUP</u>	NSK	<u>UKFC</u>
KOYO	<u>SAPA</u>	NTN	<u>UKFC</u>
SKF	SYFJ.WF	KOYO	<u>UKFC</u>
NSK	<u>EWPA</u>	SKF	<u>TU.RM</u>
NTN	<u>UELUP</u>	NSK	<u>UBT</u>
KOYO	<u>NAPA</u>	NTN	<u>AST</u>
SKF	SYFJ.KF	KOYO	<u>SBT</u>
NSK	<u>UKPA</u>	SKF	<u>TU.TF</u>
NTN	<u>UKUP</u>	NSK	<u>UCT</u>
KOYO	<u>UKPA</u>	NTN	<u>UCT</u>
SKF	SYF.RM	KOYO	<u>UCT</u>
INA	<u>PSHEY</u>	SKF	<u>TU.KF</u>
SKF	SYF TF	NSK	<u>UKT</u>
INA	RSHEY	NTN	<u>UKT</u>
SKF	SYF.FM	KOYO	<u>UKT</u>
INA	<u>PSHE</u>	SKF	<u>PF TF</u>
SKF	SYF.WF	FAG	<u>FB562</u>
INA	<u>RSHE</u>	INA	RRY
SKF	SYF.KF	SKF	PF.WF





Bearings

INTERCHANGE		INTERCHANGE	
FAG	FB362.B	SKF	<u>FYTJ.WF</u>
INA	RR	INA	RCJT
FAG	FB762.B	NSK	<u>EWFL</u>
SKF	PFD.RM	NTN	<u>UELFL</u>
INA	<u>PATRY</u>	KOYO	<u>NAFL</u>
SKF	PFD.TF	SKF	FYC.WF
INA	RRTRY	INA	<u>RFE</u>
SKF	PFD.FM_	NSK	<u>EWFC</u>
INA	RATR	NTN	<u>UELFC</u>
SKF	PFD.WF	KOYO	NAFC
INA	<u>RRTR</u>	SKF	TU.FM
SKF	PFT TF	INA	PTUE
INA	RRTY	NSK	<u>ENT</u>
NSK	<u>ENPFL</u>	NTN	<u>AELT</u>
SKF	PFT.FM_	KOYO	SAT
INA	RAT	SKF	TU.WF
NTN	<u>AELPFL</u>	INA	RTUE
KOYO	SAPFL	NSK	<u>EWT</u>
SKF	PFT.WF	NTN	<u>UELT</u>
INA	RRT	KOYO	<u>NAT</u>
SKF	P TF	SKF	PF.RM
SKF	P.WF	INA	RAY
FAG	SB762.B	NSK	<u>UBPF</u>
FKL	<u>UES</u>	NTN	<u>ASPF</u>
FKL	<u>UEN</u>	KOYO	<u>SBPF</u>
FKL	LEN	SKF	PFT.RM
FKL	LYN	INA	RATY
FKL	LYG	NSK	<u>UBPFL</u>
FKL	UYT	NTN	ASPFL
FKL	LYT	KOYO	SBPFL
FKL	UEC	SKF	P.RM
FKL	<u>UEP</u>	INA	PBY
FKL	<u>UER</u>	NSK	<u>UBPP</u>
SKF	SYJ.RM	NTN	ASPP
INA	<u>PASEY</u>	KOYO	<u>SBPP</u>
NSK	<u>UBP</u>		
NTN	<u>ASP</u>		
КОУО	<u>SBP</u>		
SKF	FYTJ.RM_		
INA	<u>PCJTY</u>		
NSK	<u>UBFL</u>		
NTN	<u>ASFL</u>		
KOYO	SBFL		
SKF	FYTJ.TF		
INA	RCJTY		
NSK	UCLF		
NTN	UCFL		
коуо	UCFL		

