

SAFL KOYO

Bearing interchange tables

TYPE: Bearing cross reference, interchange tables, Bearings and bearing units FKL



KOVO

INTERCUANCE

Technical specification

MANUFACTURER	KOYO	INTERCHANGE	
		FKL	USF
INTERCHANGE		FKL	LKF
FKL	<u>UYN</u>	FKL	UEN
FAG	<u>-</u>	FKL	LEN
NSK	<u>-</u>	FKL	LYN
SKF	<u>FYTJ.FM</u>	FKL	USN
INA	<u>PCJT</u>	FKL	LKN
NTN	<u>AELFL</u>	FKL	UEG
FKL	<u>UES</u>	FKL	LEG
FKL	<u>USS</u>	FKL	UYG
FKL	<u>LKS</u>	FKL	LYG
FKL	<u>UEV</u>	FKL	USG
FKL	<u>UYV</u>	FKL	LKG
FKL	<u>LYV</u>	FKL	UET
FKL	<u>USV</u>	FKL	LET
FKL	<u>LKV</u>	FKL	UYT
FKL	<u>UEU</u>	FKL	LYT
FKL	<u>LEU</u>	FKL	UST
FKL	<u>UYU</u>	FKL	LKT
FKL	LYU	FKL	UEC
FKL	<u>USU</u>	FKL	LEC
FKL	<u>LKU</u>	FKL	LYC
FKL	<u>UYF</u>	FKL	USC
		FKL	LKC





Bearings

INTERCHANGE		INTERCHANGE	
FKL	UED	SKF	SYF TF
FKL	LED	INA	RSHEY
FKL	UYD	SKF	SYF.FM
FKL	LYD	INA	PSHE
FKL	USD	SKF	SYF.WF
FKL	LKD	INA	RSHE
FKL	UEP	SKF	SYF.KF
FKL	LEP	KOYO	
FKL	UYP	SKF	FYJ.FM
FKL	LYP	FAG	FG162
FKL	USP	INA	PCJ
FKL	LKP	NTN	AELF
FKL	UER	KOYO	SAF
FKL	LER	FAG	FG762.B
FKL	LYR	SKF	FYJ.KF
FKL	USR	NSK	UKF
FKL	LKR	NTN	UKF
SKF	SYJ.RM	KOYO	UKF
INA	PASEY	SKF	FYTJ.RM
NSK	UBP	INA	PCJTY
NTN	ASP	NSK	UBFL
KOYO	SBP	NTN	ASFL
NTN	-	KOYO	SBFL
SKF	-	SKF	FYTJ.TF
FAG	SG762.B	INA	RCJTY
INA	-	NSK	UCLF
KOYO	-	NTN	UCFL
SKF	SYJ.KF	KOYO	UCFL
NSK	UKP	SKF	FYTJ.WF
NTN	UKP	INA	RCJT
KOYO	UKP	NSK	EWFL
SKF	SYFJ.RM	NTN	UELFL
NSK	UBPA	KOYO	NAFL
NTN	ASUP	SKF	FYTJ.KF
KOYO	SBPA	NSK	UKFL
SKF	SYFJ.FM	NTN	UKFL
NTN	AELUP	KOYO	UKFL
KOYO	SAPA	SKF	FYC.RM
SKF	SYFJ.WF	NSK	UBFC
NSK	EWPA	NTN	ASFC
NTN	UELUP	KOYO	SBFC
KOYO	NAPA	SKF	FYC.TF
SKF	SYFJ.KF	NSK	UCFC
NSK	UKPA	NTN	UCFC
NTN	UKUP	KOYO	UCFC
KOYO	UKPA	SKF	FYC.FM
SKF	SYF.RM	NTN	AELFC
INA	PSHEY	SKF	FYC.WF





Bearings

INTERCHANGE		INTERCHANGE	
INA	<u>RFE</u>	SKF	PFD.WF
NSK	<u>EWFC</u>	INA	RRTR
NTN	<u>UELFC</u>	SKF	PFT.RM
KOYO	NAFC	INA	RATY
SKF	FYC.KF	NSK	<u>UBPFL</u>
NSK	UKFC	NTN	<u>ASPFL</u>
NTN	<u>UKFC</u>	KOYO	SBPFL
KOYO	UKFC	SKF	PFT TF
SKF	TU.RM	INA	RRTY
NSK	<u>UBT</u>	NSK	ENPFL
NTN	AST	SKF	PFT.FM
KOYO	SBT	INA	RAT
SKF	TU.TF	NTN	<u>AELPFL</u>
NSK	<u>UCT</u>	KOYO	SAPFL
NTN	<u>UCT</u>	SKF	PFT.WF
KOYO	UCT	INA	RRT
SKF	<u>TU.FM</u>	SKF	P.RM
INA	PTUE	INA	PBY
NSK	<u>ENT</u>	NSK	<u>UBPP</u>
NTN	AELT	NTN	<u>ASPP</u>
KOYO	SAT	KOYO	<u>SBPP</u>
SKF	TU.WF	SKF	<u>P TF</u>
INA	RTUE	SKF	<u>P.WF</u>
NSK	<u>EWT</u>	FAG	SB762.B
NTN	<u>UELT</u>	FKL	UYS
KOYO	NAT	FKL	LEV
SKF	TU.KF	SKF	SYJ.FM
NSK	UKT	FAG	SG162
NTN	<u>UKT</u>	INA	PASE
KOYO	<u>UKT</u>	NSK	ENP
SKF	PF.RM	KOYO	SAP
INA	RAY	SKF	SYFJ.TF
NSK	<u>UBPF</u>	NSK	UCPA
NTN	ASPF	NTN	UCUP
KOYO	SBPF TE	KOYO	<u>UCPA</u>
SKF	PF TF FB562		
FAG INA			
SKF	RRY PF.WF		
	FB362.B		
INA	RR		
FAG	FB762.B		
SKF	PFD.RM		
INA	PATRY		
SKF	PFD.TF		
INA	RRTRY		
SKF	PFD.FM		
INA	RATR		
	10.011		

