

## **UELFL NTN**

Bearing interchange tables

TYPE: Bearing cross reference, interchange tables, Bearings and bearing units FKL



## **Technical specification**

MANUFACTURER	NTN	INTERCHANGE	
INTERCUANCE		FKL	LEN
INTERCHANGE	13/81	FKL	UYN
FKL	<u>LYN</u>	FKL	USN
FAG		FKL	LKN
SKF	FYTJ.WF	FKL	UEG
INA	RCJT	FKL	LEG
NSK	<u>EWFL</u>	FKL	UYG
коуо	NAFL	FKL	LYG
FKL	<u>UES</u>	FKL	USG
FKL	<u>LKS</u>	FKL	LKG
FKL	<u>UEV</u>	FKL	UET
FKL	<u>UYV</u>	FKL	LET
FKL	<u>LYV</u>	FKL	UYT
FKL	USV	FKL	LYT
FKL	<u>LKV</u>	FKL	UST
FKL	<u>UEU</u>	FKL	LKT
FKL	<u>LEU</u>	FKL	UEC
FKL	UYU	FKL	LKC
FKL	LYU	FKL	UED
FKL	<u>USU</u>	FKL	LED
FKL	<u>LKU</u>	FKL	UYD
FKL	LKF	FKL	LYD
FKL	<u>UEN</u>	FKL	USD
		FKL	LKD





## **Bearings**

INTERCHANGE		INTERCHANGE	
FKL	UEP	SKF	FYJ.KF
FKL	LEP	NSK	UKF
FKL	UYP	NTN	UKF
FKL	LYP	коуо	UKF
FKL	USP	SKF	FYTJ.RM
FKL	UER	INA	PCJTY
FKL	LER	NSK	UBFL
FKL	LYR	NTN	ASFL
FKL	LKR	KOYO	SBFL
SKF	SYJ.RM	SKF	FYTJ.TF
INA	PASEY	INA	RCJTY
NSK	UBP	NSK	UCLF
NTN	ASP	NTN	UCFL
KOYO	SBP	KOYO	UCFL
INA	<u>-</u>	SKF	FYTJ.FM
SKF	SYJ.KF	INA	PCJT
NSK	UKP	NTN	AELFL
NTN	UKP	коуо	SAFL
KOYO	UKP	SKF	FYTJ.KF
SKF	SYFJ.RM	NSK	UKFL
NSK	UBPA	NTN	UKFL
NTN	ASUP	KOYO	UKFL
KOYO	SBPA	SKF	FYC.RM
NSK	<u>-</u>	NSK	UBFC
SKF	SYFJ.FM	NTN	ASFC
NTN	AELUP	коуо	SBFC
KOYO	SAPA	SKF	FYC.TF
SKF	SYFJ.WF	NSK	UCFC
NSK	EWPA	NTN	UCFC
NTN	UELUP	KOYO	UCFC
KOYO	NAPA	SKF	FYC.FM
NTN	<u>-</u>	NTN	AELFC
SKF	<u>-</u>	SKF	FYC.WF
коуо	<u>-</u>	INA	RFE
SKF	SYFJ.KF	NSK	<u>EWFC</u>
NSK	UKPA	NTN	<u>UELFC</u>
NTN	<u>UKUP</u>	KOYO	NAFC
коуо	UKPA	SKF	FYC.KF
SKF	SYF.RM_	NSK	<u>UKFC</u>
INA	<u>PSHEY</u>	NTN	UKFC
SKF	SYF TF	KOYO	<u>UKFC</u>
INA	RSHEY	SKF	TU.RM
SKF	SYF.FM_	NSK	<u>UBT</u>
INA	PSHE	NTN	AST
SKF	SYF.WF	KOYO	SBT
INA	RSHE	SKF	<u>TU.TF</u>
SKF	SYF.KF	NSK	<u>UCT</u>
KOYO	<u></u>	NTN	<u>UCT</u>





## **Bearings**

INTERCHANGE		INTERCHANGE	
КОҮО	<u>UCT</u>	SKF	P.WF
SKF	TU.FM	FKL	UYS
INA	<u>PTUE</u>	FKL	<u>USS</u>
NSK	ENT	FKL	LEV
NTN	<u>AELT</u>	FKL	<u>UYF</u>
KOYO	SAT	FKL	USF
SKF	<u>TU.WF</u>	FKL	LEC
INA	<u>RTUE</u>	FKL	LYC
NSK	<u>EWT</u>	FKL	<u>USC</u>
NTN	<u>UELT</u>	FKL	<u>LKP</u>
KOYO	<u>NAT</u>	FKL	<u>USR</u>
SKF	<u>TU.KF</u>	SKF	SYJ.FM
NSK	<u>UKT</u>	FAG	SG162
NTN	<u>UKT</u>	INA	<u>PASE</u>
KOYO	<u>UKT</u>	NSK	<u>ENP</u>
SKF	PF.RM_	KOYO	SAP
INA	RAY	FAG	SG762.B
NSK	<u>UBPF</u>	SKF	SYFJ.TF
NTN	<u>ASPF</u>	NSK	<u>UCPA</u>
KOYO	SBPF	NTN	<u>UCUP</u>
SKF	PFD.RM	KOYO	<u>UCPA</u>
INA	PATRY	SKF	FYJ.FM
SKF	PFD.TF	FAG	FG162
INA	RRTRY	INA	<u>PCJ</u>
SKF	PFD.FM_	NTN	<u>AELF</u>
INA	<u>RATR</u>	KOYO	SAF
SKF	PFD.WF	FAG	<u>FG762.B</u>
INA	RRTR	SKF	PF TF
SKF	PFT.RM	FAG	FB562
INA	RATY	INA	RRY
NSK	<u>UBPFL</u>	SKF	PF.WF
NTN	<u>ASPFL</u>	FAG	FB362.B
KOYO	<u>SBPFL</u>	INA	RR
SKF	PFT TF	FAG	<u>FB762.B</u>
INA	RRTY	FAG	<u>SB762.B</u>
NSK	<u>ENPFL</u>		
SKF	PFT.FM		
INA	RAT		
NTN	<u>AELPFL</u>		
KOYO	SAPFL		
SKF	PFT.WF		
INA	RRT		
SKF	P.RM		
INA	<u>PBY</u>		
NSK	<u>UBPP</u>		
NTN	<u>ASPP</u>		
KOYO	<u>SBPP</u>		
SKF	<u>P TF</u>		

