

## **UKT NTN**

Bearing interchange tables

TYPE: Bearing cross reference, interchange tables, Bearings and bearing units FKL



INTERCUANCE

## **Technical specification**

MANUFACTURER	NTN	INTERCHANGE	
		FKL	USF
INTERCHANGE		FKL	LKF
FKL	<u>LKT</u>	FKL	UEN
FAG	<u>-</u>	FKL	LEN
INA	<u>-</u>	FKL	UYN
SKF	<u>TU.KF</u>	FKL	LYN
NSK	<u>UKT</u>	FKL	USN
KOYO	<u>UKT</u>	FKL	LKN
FKL	<u>UES</u>	FKL	UEG
FKL	<u>USS</u>	FKL	LEG
FKL	LKS	FKL	UYG
FKL	<u>UEV</u>	FKL	LYG
FKL	LEV	FKL	USG
FKL	<u>UYV</u>	FKL	LKG
FKL	<u>LYV</u>	FKL	UET
FKL	<u>USV</u>	FKL	LET
FKL	<u>LKV</u>	FKL	UYT
FKL	<u>UEU</u>	FKL	LYT
FKL	LEU	FKL	UST
FKL	<u>UYU</u>	FKL	UEC
FKL	<u>LYU</u>	FKL	USC
FKL	<u>USU</u>	FKL	LKC
FKL	<u>LKU</u>	FKL	UED
		FKL	LED





## **Bearings**

INTERCHANGE		INTERCHANGE	
FKL	UYD	SKF	SYF.RM
FKL	LYD	INA	PSHEY
FKL	USD	SKF	SYF TF
FKL	LKD	INA	RSHEY
FKL	UEP	SKF	SYF.FM
FKL	LEP	INA	PSHE
FKL	UYP	SKF	SYF.WF
FKL	LYP	INA	RSHE
FKL	USP	SKF	SYF.KF
FKL	LKP	KOYO	
FKL	UER	FAG	FG762.B
FKL	LER	SKF	FYJ.KF
FKL	LYR	NSK	UKF
FKL	USR	NTN	UKF
FKL	LKR	KOYO	UKF
SKF	SYJ.RM	SKF	FYTJ.RM
INA	PASEY	INA	PCJTY
NSK	UBP	NSK	UBFL
NTN	ASP	NTN	ASFL
KOYO	SBP	KOYO	SBFL
NTN	-	SKF	FYTJ.TF
SKF	-	INA	RCJTY
FAG	SG762.B	NSK	UCLF
NSK	-	NTN	UCFL
KOYO	-	KOYO	UCFL
SKF	SYJ.KF	SKF	FYTJ.FM
NSK	UKP	INA	PCJT
NTN	UKP	NTN	AELFL
KOYO	UKP	KOYO	SAFL
SKF	SYFJ.RM	SKF	FYTJ.WF
NSK	UBPA	INA	RCJT
NTN	ASUP	NSK	EWFL
KOYO	SBPA	NTN	UELFL
SKF	SYFJ.TF	KOYO	NAFL
NSK	UCPA	SKF	FYTJ.KF
NTN	UCUP	NSK	UKFL
KOYO	UCPA	NTN	UKFL
SKF	SYFJ.FM	КОҮО	UKFL
NTN	<u>AELUP</u>	SKF	FYC.RM_
KOYO	SAPA	NSK	UBFC
SKF	SYFJ.WF	NTN	ASFC
NSK	EWPA	коуо	SBFC
NTN	<u>UELUP</u>	SKF	FYC.TF
КОҮО	NAPA	NSK	<u>UCFC</u>
SKF	SYFJ.KF	NTN	UCFC
NSK	UKPA	коуо	<u>UCFC</u>
NTN	<u>UKUP</u>	SKF	FYC.FM
KOYO	UKPA	NTN	AELFC





## **Bearings**

ENPFL PFT.FM RAT **AELPFL SAPFL** PFT.WF RRT P.RM PBY **UBPP ASPP SBPP** P TF P.WF SB762.B UYS... UYF... LEC... LYC... SYJ.FM SG162 **PASE** ENP SAP FYJ.FM FG162 PCJ **AELF** SAF PF TF FB562 RRY PF.WF FB362.B RR

INTERCHANGE		INTERCHANGE
SKF	FYC.WF	NSK
INA	<u>RFE</u>	SKF
NSK	<u>EWFC</u>	INA
NTN	<u>UELFC</u>	NTN
KOYO	<u>NAFC</u>	KOYO
SKF	FYC.KF	SKF
NSK	<u>UKFC</u>	INA
NTN	<u>UKFC</u>	SKF
KOYO	<u>UKFC</u>	INA
SKF	<u>TU.RM</u>	NSK
NSK	<u>UBT</u>	NTN
NTN	<u>AST</u>	KOYO
KOYO	<u>SBT</u>	SKF
SKF	<u>TU.TF</u>	SKF
NSK	<u>UCT</u>	FAG
NTN	<u>UCT</u>	FKL
KOYO	<u>UCT</u>	FKL
SKF	<u>TU.FM</u>	FKL
INA	<u>PTUE</u>	FKL
NSK	ENT	SKF
NTN	<u>AELT</u>	FAG
KOYO	SAT	INA
SKF	<u>TU.WF</u>	NSK
INA	<u>RTUE</u>	KOYO
NSK	<u>EWT</u>	SKF
NTN	<u>UELT</u>	FAG
KOYO	<u>NAT</u>	INA
SKF	PF.RM	NTN
INA	RAY	KOYO
NSK	<u>UBPF</u>	SKF
NTN	<u>ASPF</u>	FAG
KOYO	<u>SBPF</u>	INA
FAG	<u>FB762.B</u>	SKF
SKF	PFD.RM	FAG
INA	<u>PATRY</u>	INA
SKF	PFD.TF	
INA	RRTRY	
SKF	PFD.FM	
INA	RATR	
SKF	PFD.WF	
INA	RRTR	
SKF	PFT.RM	
INA	RATY	
NSK	<u>UBPFL</u>	
NTN	<u>ASPFL</u>	
KOYO	<u>SBPFL</u>	
SKF	PFT TF	
INA	RRTY	

