

SAPFL KOYO

Bearing interchange tables

TYPE: Bearing cross reference, interchange tables, Bearings and bearing units FKL



INTERCUANCE

Technical specification

MANUFACTURER	KOYO	INTERCHANGE	
		FKL	USF
INTERCHANGE		FKL	LKF
FKL	<u>UYP</u>	FKL	UEN
FAG	<u>-</u>	FKL	LEN
NSK	<u>-</u>	FKL	UYN
SKF	PFT.FM	FKL	LYN
INA	RAT	FKL	USN
NTN	<u>AELPFL</u>	FKL	LKN
FKL	<u>UES</u>	FKL	UEG
FKL	<u>USS</u>	FKL	LEG
FKL	<u>LKS</u>	FKL	UYG
FKL	<u>UEV</u>	FKL	LYG
FKL	<u>UYV</u>	FKL	USG
FKL	<u>LYV</u>	FKL	LKG
FKL	<u>USV</u>	FKL	UET
FKL	<u>LKV</u>	FKL	LET
FKL	<u>UEU</u>	FKL	UYT
FKL	<u>LEU</u>	FKL	LYT
FKL	<u>UYU</u>	FKL	UST
FKL	<u>LYU</u>	FKL	LKT
FKL	<u>USU</u>	FKL	UEC
FKL	<u>LKU</u>	FKL	LEC
FKL	<u>UYF</u>	FKL	LYC
		FKL	USC

KOVO





Bearings

INTERCHANGE		INTERCHANGE	
FKL	LKC	SKF	SYF TF
FKL	UED	INA	RSHEY
FKL	LED	SKF	SYF.FM
FKL	UYD	INA	PSHE
FKL	LYD	SKF	SYF.WF
FKL	USD	INA	RSHE
FKL	LKD	SKF	SYF.KF
FKL	UEP	KOYO	<u></u>
FKL	LEP	SKF	FYJ.FM
FKL	LYP	FAG	FG162
FKL	USP	INA	PCJ
FKL	LKP	NTN	AELF
FKL	UER	KOYO	SAF
FKL	LER	FAG	FG762.B
FKL	LYR	SKF	FYJ.KF
FKL	USR	NSK	UKF
FKL	LKR	NTN	UKF
SKF	SYJ.RM	KOYO	UKF
INA	PASEY	SKF	FYTJ.RM_
NSK	UBP	INA	PCJTY
NTN	ASP	NSK	UBFL
KOYO	SBP	NTN	ASFL
NTN	-	KOYO	SBFL
SKF	<u>-</u>	SKF	FYTJ.TF
FAG	SG762.B	INA	RCJTY
INA	<u>-</u>	NSK	UCLF
KOYO	<u>-</u>	NTN	UCFL
SKF	SYJ.KF	KOYO	UCFL
NSK	<u>UKP</u>	SKF	FYTJ.FM_
NTN	UKP	INA	PCJT
KOYO	UKP	NTN	<u>AELFL</u>
SKF	SYFJ.RM	KOYO	SAFL
NSK	UBPA	SKF	FYTJ.WF
NTN	ASUP	INA	RCJT
KOYO	SBPA	NSK	EWFL
SKF	SYFJ.FM	NTN	UELFL
NTN	AELUP	KOYO	NAFL
KOYO	SAPA	SKF	FYTJ.KF
SKF	SYFJ.WF	NSK	UKFL
NSK	EWPA	NTN	UKFL
NTN	UELUP	KOYO	UKFL
КОҮО	NAPA	SKF	FYC.RM
SKF	SYFJ.KF	NSK	UBFC
NSK	UKPA	NTN	ASFC
NTN	UKUP	KOYO	SBFC
КОҮО	UKPA	SKF	FYC.TF
SKF	SYF.RM	NSK	UCFC
INA	PSHEY	NTN	UCFC





Bearings

INTERCHANGE		INTERCHANGE	
KOYO	<u>UCFC</u>	SKF	PFD.TF
SKF	FYC.FM	INA	RRTRY
NTN	<u>AELFC</u>	SKF	PFD.FM
SKF	FYC.WF	INA	RATR
INA	<u>RFE</u>	SKF	PFD.WF
NSK	EWFC	INA	RRTR
NTN	<u>UELFC</u>	SKF	PFT.RM
KOYO	NAFC	INA	RATY
SKF	FYC.KF	NSK	<u>UBPFL</u>
NSK	UKFC	NTN	ASPFL
NTN	<u>UKFC</u>	KOYO	SBPFL
KOYO	<u>UKFC</u>	SKF	PFT TF
SKF	TU.RM	INA	RRTY
NSK	<u>UBT</u>	NSK	ENPFL
NTN	<u>AST</u>	SKF	PFT.WF
KOYO	SBT	INA	RRT
SKF	TU.TF	SKF	P.RM
NSK	UCT	INA	PBY
NTN	<u>UCT</u>	NSK	<u>UBPP</u>
KOYO	UCT	NTN	ASPP
SKF	TU.FM_	KOYO	SBPP
INA	PTUE	SKF	P TF
NSK	ENT	SKF	P.WF
NTN	<u>AELT</u>	FAG	SB762.B
KOYO	SAT	FKL	<u>UYS</u>
SKF	TU.WF	FKL	<u>LEV</u>
INA	RTUE	SKF	SYJ.FM_
NSK	<u>EWT</u>	FAG	SG162
NTN	<u>UELT</u>	INA	<u>PASE</u>
KOYO	NAT	NSK	<u>ENP</u>
SKF	TU.KF	KOYO	SAP
NSK	<u>UKT</u>	SKF	SYFJ.TF
NTN	<u>UKT</u>	NSK	<u>UCPA</u>
KOYO	<u>UKT</u>	NTN	<u>UCUP</u>
SKF	PF.RM	KOYO	<u>UCPA</u>
INA	RAY		
NSK	<u>UBPF</u>		
NTN	ASPF		
KOYO	<u>SBPF</u>		
SKF	PF TF		
FAG	FB562		
INA	RRY		
SKF	PF.WF		
FAG	FB362.B		
INA	RR		
FAG	FB762.B		
SKF	PFD.RM		
INA	PATRY		

