

LKP... FKL

Bearing interchange tables

TYPE: Bearing cross reference, interchange tables, Bearings and bearing units FKL



Technical specification

MANUFACTURER	FKL	INTERCHANGE
INTERCUANCE		FKL
INTERCHANGE		FKL
NTN	<u>-</u>	FKL
SKF	<u>-</u>	FKL
INA	<u> </u>	FKL
NSK	<u>-</u>	FKL
KOYO	<u>-</u>	FKL
FKL	UYS	FKL
FKL	USS	
FKL	LKS	FKL
FKL	UEV	FKL
FKL	LEV	FKL
FKL	UYV	FKL
FKL		FKL
	LYV	FKL
FKL	USV	FKL
FKL	<u>LKV</u>	FKL
FKL	<u>UEU</u>	FKL
FKL	<u>LEU</u>	FKL
FKL	<u>UYU</u>	FKL
FKL	LYU	FKL
FKL	<u>USU</u>	FKL
FKL	LKU	
FKL	UYF	FKL
		FKL

INTERCHANGE	
FKL	<u>USF</u>
FKL	LKF
FKL	<u>UYN</u>
FKL	<u>USN</u>
FKL	<u>LKN</u>
FKL	UEG
FKL	LEG
FKL	UYG
FKL	<u>USG</u>
FKL	<u>LKG</u>
FKL	<u>UET</u>
FKL	LET
FKL	<u>UST</u>
FKL	LKT
FKL	LEC
FKL	LYC
FKL	USC
FKL	LKC
FKL	<u>UED</u>
FKL	LED
FKL	UYD
FKL	LYD
FKL	USD
FKL	LKD





Bearings

INTERCHANGE		INTERCHANGE	
FKL	LEP	SKF	FYJ.FM
FKL	UYP	FAG	FG162
FKL	LYP	INA	PCJ
FKL	USP	NTN	AELF
FKL	LER	KOYO	SAF
FKL	LYR	FAG	FG762.B
FKL	USR	SKF	FYJ.KF
FKL	LKR	NSK	UKF
SKF	SYJ.FM_	NTN	UKF
FAG	SG162	KOYO	UKF
INA	PASE	SKF	FYTJ.FM_
NSK	ENP	INA	PCJT
КОҮО	SAP	NTN	AELFL
FAG	SG762.B	KOYO	SAFL
FAG	<u>-</u>	SKF	FYTJ.KF
SKF	SYJ.KF	NSK	UKFL
NSK	<u>UKP</u>	NTN	<u>UKFL</u>
NTN	UKP	KOYO	UKFL
КОҮО	<u>UKP</u>	SKF	FYC.RM
SKF	SYFJ.RM	NSK	<u>UBFC</u>
NSK	<u>UBPA</u>	NTN	<u>ASFC</u>
NTN	<u>ASUP</u>	KOYO	SBFC
KOYO	<u>SBPA</u>	SKF	FYC.TF
SKF	SYFJ.TF	NSK	<u>UCFC</u>
NSK	<u>UCPA</u>	NTN	<u>UCFC</u>
NTN	<u>UCUP</u>	KOYO	<u>UCFC</u>
KOYO	<u>UCPA</u>	SKF	FYC.FM
SKF	SYFJ.FM_	NTN	<u>AELFC</u>
NTN	<u>AELUP</u>	SKF	<u>FYC.KF</u>
KOYO	SAPA	NSK	<u>UKFC</u>
SKF	SYFJ.WF	NTN	<u>UKFC</u>
NSK	<u>EWPA</u>	KOYO	<u>UKFC</u>
NTN	<u>UELUP</u>	SKF	<u>TU.RM</u>
KOYO	<u>NAPA</u>	NSK	<u>UBT</u>
SKF	SYFJ.KF	NTN	<u>AST</u>
NSK	<u>UKPA</u>	KOYO	<u>SBT</u>
NTN	<u>UKUP</u>	SKF	<u>TU.TF</u>
KOYO	<u>UKPA</u>	NSK	<u>UCT</u>
SKF	SYF.RM_	NTN	<u>UCT</u>
INA	<u>PSHEY</u>	KOYO	<u>UCT</u>
SKF	SYF TF	SKF	<u>TU.KF</u>
INA	<u>RSHEY</u>	NSK	<u>UKT</u>
SKF	SYF.FM_	NTN	<u>UKT</u>
INA	<u>PSHE</u>	KOYO	<u>UKT</u>
SKF	SYF.WF	SKF	<u>PF TF</u>
INA	RSHE	FAG	FB562
SKF	SYF.KF	INA	RRY
KOYO		SKF	PF.WF





Bearings

INTERCHANGE		INTERCHANGE	
FAG	FB362.B	SKF	<u>FYTJ.WF</u>
INA	RR	INA	RCJT
FAG	FB762.B	NSK	<u>EWFL</u>
SKF	PFD.RM	NTN	<u>UELFL</u>
INA	<u>PATRY</u>	KOYO	<u>NAFL</u>
SKF	PFD.TF	SKF	FYC.WF
INA	RRTRY	INA	<u>RFE</u>
SKF	PFD.FM_	NSK	<u>EWFC</u>
INA	RATR	NTN	<u>UELFC</u>
SKF	PFD.WF	KOYO	NAFC
INA	<u>RRTR</u>	SKF	TU.FM
SKF	PFT TF	INA	PTUE
INA	RRTY	NSK	<u>ENT</u>
NSK	<u>ENPFL</u>	NTN	<u>AELT</u>
SKF	PFT.FM_	KOYO	SAT
INA	RAT	SKF	TU.WF
NTN	<u>AELPFL</u>	INA	RTUE
KOYO	SAPFL	NSK	<u>EWT</u>
SKF	PFT.WF	NTN	<u>UELT</u>
INA	RRT	KOYO	<u>NAT</u>
SKF	P TF	SKF	PF.RM
SKF	P.WF	INA	RAY
FAG	SB762.B	NSK	<u>UBPF</u>
FKL	<u>UES</u>	NTN	<u>ASPF</u>
FKL	<u>UEN</u>	KOYO	<u>SBPF</u>
FKL	LEN	SKF	PFT.RM
FKL	LYN	INA	RATY
FKL	LYG	NSK	<u>UBPFL</u>
FKL	UYT	NTN	ASPFL
FKL	LYT	KOYO	SBPFL
FKL	UEC	SKF	P.RM
FKL	<u>UEP</u>	INA	PBY
FKL	<u>UER</u>	NSK	<u>UBPP</u>
SKF	SYJ.RM	NTN	ASPP
INA	<u>PASEY</u>	KOYO	<u>SBPP</u>
NSK	<u>UBP</u>		
NTN	<u>ASP</u>		
КОУО	<u>SBP</u>		
SKF	FYTJ.RM_		
INA	<u>PCJTY</u>		
NSK	<u>UBFL</u>		
NTN	<u>ASFL</u>		
KOYO	SBFL		
SKF	FYTJ.TF		
INA	RCJTY		
NSK	UCLF		
NTN	UCFL		
коуо	UCFL		

