

UBPP NSK

Bearing interchange tables

TYPE: Bearing cross reference, interchange tables, Bearings and bearing units FKL



INTERCUANCE

Technical specification

MANUFACTURER	<u>NSK</u>	INTERCHANGE	
		FKL	LEN
INTERCHANGE		FKL	UYN
FKL	UER	FKL	LYN
FAG	<u>-</u>	FKL	USN
SKF	P.RM	FKL	LKN
INA	<u>PBY</u>	FKL	UEG
NTN	<u>ASPP</u>	FKL	LEG
KOYO	<u>SBPP</u>	FKL	UYG
FKL	<u>UES</u>	FKL	LYG
FKL	<u>LKS</u>	FKL	USG
FKL	<u>UEV</u>	FKL	LKG
FKL	<u>UYV</u>	FKL	UET
FKL	<u>LYV</u>	FKL	LET
FKL	<u>USV</u>	FKL	UYT
FKL	<u>LKV</u>	FKL	LYT
FKL	<u>UEU</u>	FKL	UST
FKL	<u>LEU</u>	FKL	LKT
FKL	<u>UYU</u>	FKL	UEC
FKL	<u>LYU</u>	FKL	LKC
FKL	<u>USU</u>	FKL	UED
FKL	<u>LKU</u>	FKL	LED
FKL	<u>LKF</u>	FKL	UYD
FKL	UEN	FKL	LYD
		FKL	USD





Bearings

INTERCHANGE		INTERCHANGE	
FKL	LKD	SKF	FYJ.KF
FKL	UEP	NSK	UKF
FKL	LEP	NTN	UKF
FKL	UYP	коуо	UKF
FKL	LYP	SKF	FYTJ.RM
FKL	USP	INA	PCJTY
FKL	LER	NSK	UBFL
FKL	LYR	NTN	ASFL
FKL	LKR	KOYO	SBFL
SKF	SYJ.RM	SKF	FYTJ.TF
INA	PASEY	INA	RCJTY
NSK	UBP	NSK	UCLF
NTN	ASP	NTN	UCFL
KOYO	SBP	KOYO	UCFL
INA	<u> </u>	SKF	FYTJ.FM
SKF	SYJ.KF	INA	PCJT
NSK	UKP	NTN	AELFL
NTN	UKP	KOYO	SAFL
KOYO	UKP	SKF	FYTJ.WF
SKF	SYFJ.RM	INA	RCJT
NSK	UBPA	NSK	EWFL
NTN	ASUP	NTN	UELFL
KOYO	SBPA	KOYO	NAFL
NSK	-	SKF	FYTJ.KF
SKF	SYFJ.FM	NSK	UKFL
NTN	AELUP	NTN	UKFL
KOYO	SAPA	KOYO	UKFL
SKF	SYFJ.WF	SKF	FYC.RM
NSK	EWPA	NSK	UBFC
NTN	UELUP	NTN	ASFC
KOYO	NAPA	KOYO	SBFC
NTN	-	SKF	FYC.TF
SKF		NSK	UCFC
KOYO		NTN	UCFC
SKF	SYFJ.KF	KOYO	UCFC
NSK	UKPA	SKF	FYC.FM
NTN	UKUP	NTN	AELFC
KOYO	UKPA	SKF	FYC.WF
SKF	SYF.RM	INA	RFE
INA	PSHEY	NSK	EWFC
SKF	SYF TF	NTN	UELFC
INA	RSHEY	KOYO	NAFC
SKF	SYF.FM	SKF	FYC.KF
INA	PSHE	NSK	UKFC
SKF	SYF.WF	NTN	UKFC
INA	RSHE	KOYO	UKFC
SKF	SYF.KF	SKF	TU.RM
KOYO	<u> </u>	NSK	UBT
	<u>==</u>	HOIN	001





Bearings

INTERCHANGE		INTERCHANGE	
NTN	<u>AST</u>	SKF	P.WF
KOYO	SBT	FKL	UYS
SKF	TU.TF	FKL	<u>USS</u>
NSK	UCT	FKL	LEV
NTN	<u>UCT</u>	FKL	<u>UYF</u>
KOYO	UCT	FKL	USF
SKF	TU.FM	FKL	LEC
INA	PTUE	FKL	LYC
NSK	<u>ENT</u>	FKL	<u>USC</u>
NTN	<u>AELT</u>	FKL	<u>LKP</u>
KOYO	SAT	FKL	<u>USR</u>
SKF	TU.WF	SKF	SYJ.FM
INA	RTUE	FAG	<u>SG162</u>
NSK	EWT	INA	<u>PASE</u>
NTN	<u>UELT</u>	NSK	<u>ENP</u>
KOYO	NAT	KOYO	SAP
SKF	<u>TU.KF</u>	FAG	<u>SG762.B</u>
NSK	<u>UKT</u>	SKF	SYFJ.TF
NTN	<u>UKT</u>	NSK	<u>UCPA</u>
KOYO	UKT	NTN	<u>UCUP</u>
SKF	PF.RM	KOYO	<u>UCPA</u>
INA	RAY	SKF	FYJ.FM
NSK	<u>UBPF</u>	FAG	FG162
NTN	<u>ASPF</u>	INA	<u>PCJ</u>
KOYO	<u>SBPF</u>	NTN	<u>AELF</u>
SKF	PFD.RM	KOYO	SAF
INA	<u>PATRY</u>	FAG	FG762.B
SKF	PFD.TF	SKF	PF TF
INA	RRTRY	FAG	FB562
SKF	PFD.FM	INA	RRY
INA	RATR	SKF	PF.WF
SKF	PFD.WF	FAG	FB362.B
INA	RRTR	INA	RR
SKF	PFT.RM	FAG	FB762.B
INA	RATY	FAG	<u>SB762.B</u>
NSK	<u>UBPFL</u>		
NTN	<u>ASPFL</u>		
KOYO	SBPFL		
SKF	PFT TF		
INA	RRTY		
NSK	<u>ENPFL</u>		
SKF	PFT.FM_		
INA	RAT		
NTN	AELPFL		
KOYO	SAPFL		
SKF	PFT.WF		
INA	RRT		
SKF	P TF		

