

USR... FKL

Bearing interchange tables

TYPE: Bearing cross reference, interchange tables, Bearings and bearing units FKL



Technical specification

MANUFACTURER	<u>FKL</u>
INTERCHANGE	
NTN	<u>-</u>
SKF	<u>-</u>
INA	<u> </u>
NSK	<u>-</u>
KOYO	<u>-</u>
FAG	SB762.B
FKL	UYS
FKL	USS
FKL	LKS
FKL	UEV
FKL	LEV
FKL	<u>UYV</u>
FKL	LYV
FKL	<u>USV</u>
FKL	LKV
FKL	<u>UEU</u>
FKL	<u>LEU</u>
FKL	<u>UYU</u>
FKL	LYU
FKL	<u>USU</u>
FKL	LKU

INTERCHANGE	
FKL	UYF
FKL	USF
FKL	LKF
FKL	UYN
FKL	USN
FKL	LKN
FKL	UEG
FKL	LEG
FKL	UYG
FKL	USG
FKL	LKG
FKL	UET
FKL	<u>LET</u>
FKL	UST
FKL	<u>LKT</u>
FKL	LEC
FKL	LYC
FKL	USC
FKL	<u>LKC</u>
FKL	<u>UED</u>
FKL	LED
FKL	UYD
FKL	LYD
FKL	USD





Bearings

INTERCHANGE		INTERCHANGE	
FKL	LKD	KOYO	<u></u>
FKL	LEP	SKF	FYJ.FM
FKL	UYP	FAG	FG162
FKL	LYP	INA	PCJ
FKL	USP	NTN	<u>AELF</u>
FKL	LKP	KOYO	SAF
FKL	LER	FAG	FG762.B
FKL	LYR	SKF	FYJ.KF
FKL	LKR	NSK	<u>UKF</u>
SKF	SYJ.FM	NTN	UKF
FAG	SG162	KOYO	<u>UKF</u>
INA	PASE	SKF	FYTJ.FM
NSK	ENP	INA	<u>PCJT</u>
KOYO	SAP	NTN	AELFL
FAG	SG762.B	KOYO	SAFL
FAG	-	SKF	FYTJ.KF
SKF	SYJ.KF	NSK	UKFL
NSK	UKP	NTN	UKFL
NTN	UKP	KOYO	UKFL
KOYO	UKP	SKF	FYC.RM
SKF	SYFJ.RM	NSK	UBFC
NSK	UBPA	NTN	ASFC
NTN	ASUP	KOYO	SBFC
KOYO	SBPA	SKF	FYC.TF
SKF	SYFJ.TF	NSK	UCFC
NSK	UCPA	NTN	UCFC
NTN	UCUP	KOYO	UCFC
KOYO	UCPA	SKF	FYC.FM
SKF	SYFJ.FM	NTN	AELFC
NTN	AELUP	SKF	FYC.KF
KOYO	SAPA	NSK	UKFC
SKF	SYFJ.WF	NTN	UKFC
NSK	EWPA	KOYO	UKFC
NTN	UELUP	SKF	TU.RM
KOYO	NAPA	NSK	UBT
SKF	SYFJ.KF	NTN	AST
NSK	UKPA	KOYO	SBT
NTN	UKUP	SKF	TU.TF
KOYO	UKPA	NSK	UCT
SKF	SYF.RM	NTN	UCT
INA	PSHEY	KOYO	UCT
SKF	SYF TF	SKF	TU.KF
INA	RSHEY	NSK	UKT
SKF	SYF.FM	NTN	UKT
INA	PSHE	KOYO	UKT
SKF	SYF.WF	SKF	PF TF
INA	RSHE	FAG	FB562
SKF	SYF.KF	INA	RRY
-		•	





Bearings

INTERCHANGE	INTERCHANGE
SKF PF.WF	SKF <u>FYTJ.WF</u>
FAG <u>FB362.E</u>	INA <u>RCJT</u>
INA RF	NSK <u>EWFL</u>
FAG <u>FB762.E</u>	
SKF PFD.RM	
INA <u>PATRY</u>	
SKF PFD.TF	
INA RRTRY	
SKF PFD.FM	
INA RATE	
SKF PFD.WF	
INA RRTF	
SKF PFT TF	
INA RRTY	
NSK ENPFL	
SKF PFT.FM	
INA RAT	
NTN AELPFI	
KOYO SAPFL	
SKF PFT.WF	
INA RRI	
SKF PTF	
SKF P.WF FKL UES	
FKL UES FKL UEN	
FKL LEN	
FKL LYN	
FKL LYG	
FKL UYT	
FKL LYT	
FKL UEC	
FKL UEP	
FKL UER	
SKF SYJ.RM	
INA PASEY	
NSK UBF	
NTN	
KOYO SBF	
SKF FYTJ.RM	
INA PCJTY	
NSK <u>UBFL</u>	<u>.</u>
NTN <u>ASFL</u>	<u>-</u>
KOYO <u>SBFL</u>	
SKF <u>FYTJ.TF</u>	: -
INA RCJTY	
NSK <u>UCLF</u>	_
NTN <u>UCFL</u>	
KOYO <u>UCFI</u>	<u>-</u>

