

## **SB762.B FAG**

Bearing interchange tables

TYPE: Bearing cross reference, interchange tables, Bearings and bearing units FKL



INTERCUANCE

## **Technical specification**

MANUFACTURER	<u>FAG</u>	INTERCHANGE
		FKL
INTERCHANGE		FKL
FKL	<u>USR</u>	FKL
NTN	<u>-</u>	FKL
SKF	<u>-</u>	FKL
INA	<u>-</u>	FKL
NSK	<u>-</u>	FKL
KOYO	<u>-</u>	FKL
FKL	UYS	FKL
FKL	<u>USS</u>	FKL
FKL	<u>LKS</u>	FKL
FKL	UEV	FKL
FKL	LEV	FKL
FKL	UYV	FKL
FKL	LYV	FKL
FKL	USV	FKL
FKL	LKV	FKL
FKL	UEU	FKL
FKL	LEU	
FKL	<u>UYU</u>	FKL
FKL	LYU	FKL
FKL	USU	FKL
FKL	LKU	FKL
	<u> </u>	FKL

MILKEHANGE	
FKL	UYF
FKL	<u>USF</u>
FKL	<u>LKF</u>
FKL	<u>UYN</u>
FKL	<u>USN</u>
FKL	LKN
FKL	UEG
FKL	LEG
FKL	UYG
FKL	USG
FKL	LKG
FKL	<u>UET</u>
FKL	<u>LET</u>
FKL	UST
FKL	<u>LKT</u>
FKL	LEC
FKL	LYC
FKL	<u>USC</u>
FKL	<u>LKC</u>
FKL	<u>UED</u>
FKL	<u>LED</u>
FKL	<u>UYD</u>
FKL	LYD
FKL	USD





## **Bearings**

INTERCHANGE		INTERCHANGE	
FKL	LKD	KOYO	<u></u>
FKL	LEP	SKF	FYJ.FM
FKL	UYP	FAG	FG162
FKL	LYP	INA	PCJ
FKL	USP	NTN	<u>AELF</u>
FKL	LKP	KOYO	SAF
FKL	LER	FAG	FG762.B
FKL	LYR	SKF	FYJ.KF
FKL	LKR	NSK	<u>UKF</u>
SKF	SYJ.FM	NTN	UKF
FAG	SG162	KOYO	<u>UKF</u>
INA	PASE	SKF	FYTJ.FM
NSK	ENP	INA	<u>PCJT</u>
KOYO	SAP	NTN	AELFL
FAG	SG762.B	KOYO	SAFL
FAG	-	SKF	FYTJ.KF
SKF	SYJ.KF	NSK	UKFL
NSK	UKP	NTN	UKFL
NTN	UKP	KOYO	UKFL
KOYO	UKP	SKF	FYC.RM
SKF	SYFJ.RM	NSK	UBFC
NSK	UBPA	NTN	ASFC
NTN	ASUP	KOYO	SBFC
KOYO	SBPA	SKF	FYC.TF
SKF	SYFJ.TF	NSK	UCFC
NSK	UCPA	NTN	UCFC
NTN	UCUP	KOYO	UCFC
KOYO	UCPA	SKF	FYC.FM
SKF	SYFJ.FM	NTN	AELFC
NTN	AELUP	SKF	FYC.KF
KOYO	SAPA	NSK	UKFC
SKF	SYFJ.WF	NTN	UKFC
NSK	EWPA	KOYO	UKFC
NTN	UELUP	SKF	TU.RM
KOYO	NAPA	NSK	UBT
SKF	SYFJ.KF	NTN	AST
NSK	UKPA	KOYO	SBT
NTN	UKUP	SKF	TU.TF
KOYO	UKPA	NSK	UCT
SKF	SYF.RM	NTN	UCT
INA	PSHEY	KOYO	UCT
SKF	SYF TF	SKF	TU.KF
INA	RSHEY	NSK	UKT
SKF	SYF.FM	NTN	UKT
INA	PSHE	KOYO	UKT
SKF	SYF.WF	SKF	PF TF
INA	RSHE	FAG	FB562
SKF	SYF.KF	INA	RRY
-		•	





## **Bearings**

INTERCHANGE		INTERCHANGE	
SKF	PF.WF	SKF	FYTJ.WF
FAG	FB362.B	INA	<u>RCJT</u>
INA	RR	NSK	<u>EWFL</u>
FAG	FB762.B	NTN	<u>UELFL</u>
SKF	PFD.RM	KOYO	NAFL
INA	<u>PATRY</u>	SKF	FYC.WF
SKF	PFD.TF	INA	RFE
INA	RRTRY	NSK	<u>EWFC</u>
SKF	PFD.FM	NTN	<u>UELFC</u>
INA	RATR	KOYO	NAFC
SKF	PFD.WF	SKF	TU.FM_
INA	RRTR	INA	PTUE
SKF	PFT TF	NSK	ENT
INA	RRTY	NTN	AELT
NSK	<u>ENPFL</u>	KOYO	SAT
SKF	PFT.FM	SKF	TU.WF
INA	RAT	INA	RTUE
NTN	<u>AELPFL</u>	NSK	EWT
KOYO	SAPFL	NTN	<u>UELT</u>
SKF	PFT.WF	KOYO	NAT
INA	RRT	SKF	PF.RM
SKF	P TF	INA	RAY
SKF	P.WF	NSK	<u>UBPF</u>
FKL	<u>UES</u>	NTN	<u>ASPF</u>
FKL	UEN	KOYO	SBPF
FKL	LEN	SKF	PFT.RM
FKL	LYN	INA	RATY
FKL	LYG	NSK	<u>UBPFL</u>
FKL	UYT	NTN	<u>ASPFL</u>
FKL	LYT	KOYO	SBPFL
FKL	UEC	SKF	P.RM
FKL	UEP	INA	PBY
FKL	UER	NSK	<u>UBPP</u>
SKF	SYJ.RM	NTN	<u>ASPP</u>
INA	<u>PASEY</u>	KOYO	<u>SBPP</u>
NSK	<u>UBP</u>		
NTN	<u>ASP</u>		
КОҮО	SBP		
SKF	FYTJ.RM		
INA	<u>PCJTY</u>		
NSK	<u>UBFL</u>		
NTN	<u>ASFL</u>		
KOYO	SBFL		
SKF	FYTJ.TF		
INA	RCJTY		
NSK	<u>UCLF</u>		
NTN	UCFL		
коуо	<u>UCFL</u>		

